



Engineering the flow of communication

OfficeRight™ Desktop Letter Folder DF100



Operator Guide

OfficeRight™ Desktop Letter Folder DF100

SV40207 First Edition, May 2003

© 2003 Pitney Bowes Inc.

All rights reserved. This book may not be reproduced in whole or in part in any fashion or stored in a retrieval system of any type or transmitted by any means, electronically or mechanically, without the express written permission of Pitney Bowes Inc.

We have made every reasonable effort to assure the accuracy and usefulness of this manual, however, we cannot assume responsibility for errors or omissions or liability for the misuse or misapplication of our products.

OfficeRight is a registered trademark and PB Supply Line is a service mark of Pitney Bowes Inc.



WARNING: Never connect power to this product until you are ready to use the letter folder. The AC outlet used for this machine must be nearby and must not be blocked. **This machine contains moving parts that can catch hair, loose clothing or jewelry.** During operation and maintenance, keep hair, loose clothing and jewelry clear of moving parts. Disconnect the power supply from the wall outlet before attempting any service to the unit, and before removing the cover for any reason.

Specifications

Operation: Manual feed, automatic on/off, 1800 letter folds per hour

Paper Sizes: Adjustable for two standard paper sizes:

- 8 1/2" x 11" to fit a #10 envelope
- ISO A4 paper (210 x 297mm) to fit a DL envelope (Europe)

Capacity: 1-3 sheets of 16-24# bond paper. Sheets may be stapled.


Power: 1.2 Amp 24 Volt wall pack power supply

Size: 12 3/4" W x 6" H x 5 1/2"D (326mm W x 153mmH x 140mm D)


Weight: 7.5 lbs. (3.4 kg)

Normal Operation

1. Insert the power connector into the receptacle on the right hand side of the paper folder (see figure below). Plug the other end of the power connector into an appropriate wall outlet. **NOTE:** The paper folder does not have an ON-OFF switch, so your folder is active immediately after the power connector is plugged in.

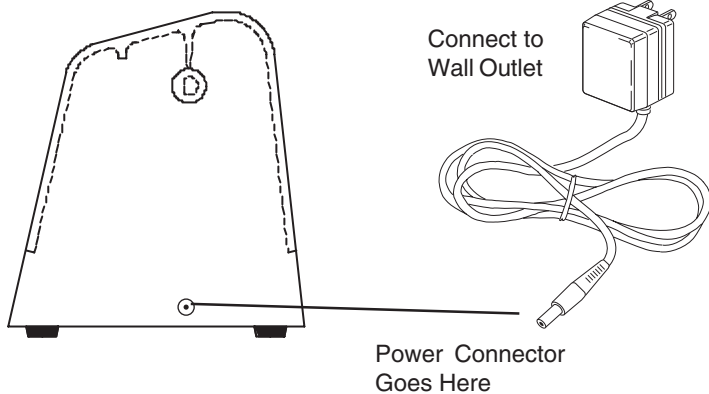

2. Insert up to three sheets of paper approximately 1 1/2" into the rear slot. Hold paper so that it lies squarely in the nip (pinch point) of the rollers underneath. There will be a brief time delay, then the folder will automatically pull the paper in. Once the folding starts, the paper should be released. **NOTE:** For accurate folds, hold your document very lightly at the top center of the sheets, as shown below. This will allow the paper to square itself on the folding rollers.

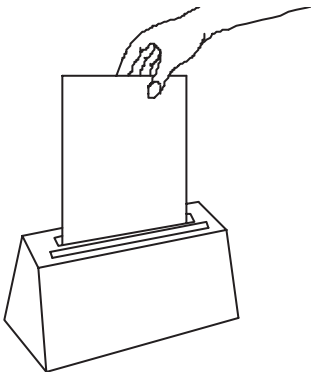


3. Remove the folded paper from the front slot.


Tips For Best Performance

- Never put more than three sheets of paper into the folder at one time.
- To fold for a window envelope, insert paper with the top up and the writing facing yourself. To fold for a business letter, insert paper top up and writing facing away from yourself (see below).

FOLD LETTER IN

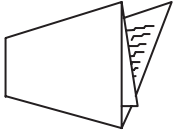

OR

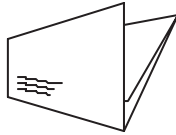


FOLD LETTER OUT


- Stapled pages may be used in the folder; however, do not place staples at the fold positions (that is, approximately 1/3 of the distance from the top and bottom of the sheet). Stapled end of paper must enter machine first.

Clearing Jams

1. **Unplug the folder.**
2. From the bottom of the folder, remove the paper stop (see below) by gently flexing it in the middle and withdrawing one end first.

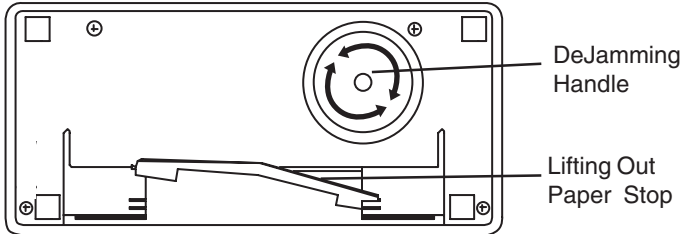

3. Remove the dejamming handle (PN#18MR0620014) by turning it in either direction while pulling out gently.
4. Insert the dejamming handle through the hole in the folder cover onto the D-shaped shaft inside the unit (see below).

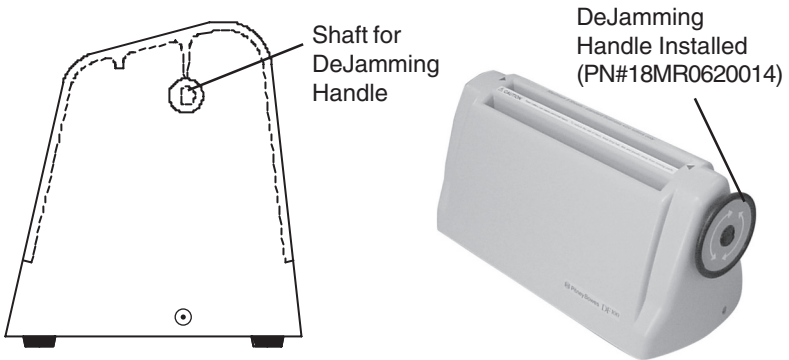


5. Turn the handle in either direction while carefully pulling the paper out the top or bottom of the folder.
6. After the jam has been cleared, return the dejamming handle and paper stop to their normal positions.
7. Plug in the folder and follow *Normal Operation* procedure.


Changing the Fold Setting to A4 Paper

The folder is shipped with the paper stop (fold) setting set for 8 1/2" x 11" paper. To use A4 paper (as in the UK), you will need to change the paper stop. When you view the bottom of the folder as shown below, the top pair of slots is for the paper stop setting for 8 1/2" x 11" paper; the bottom pair of slots is the setting for A4 paper.


Paper Stop Setting for 8-1/2" x11" Paper (Factory Set)

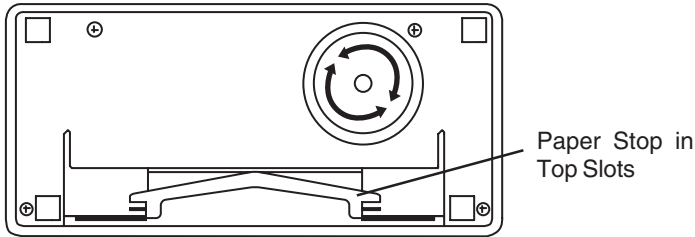

Paper Stop Setting for A4 Paper (Manually Set)

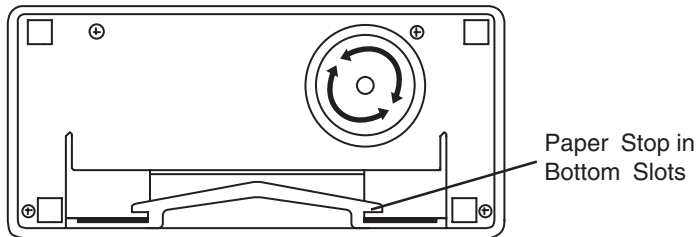

1. **Unplug the folder.**
2. Remove paper stop (PN#18MR0620013) by gently flexing it in the middle and withdrawing one end at a time.
3. Insert the paper stop into the other pair of slots by gently flexing it and inserting one end at a time.

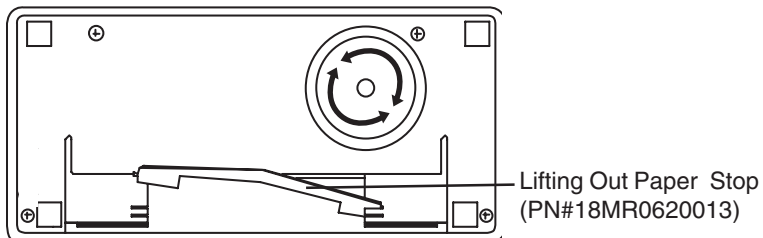

4. Plug in the folder and follow *Normal Operation* procedure.

Troubleshooting

- Check that the folder is plugged into a working AC outlet.
- Check for jams and clear as explained in *Clearing Jams*.
- Check that the paper stops are set to the correct size of paper as explained in *Changing the Fold Setting*.
- The circuit breaker may have tripped. Reset the breaker by unplugging the folder for at least 1 minute to allow the circuit breaker to cool. The paper folder should then function properly.

Service Support

Should you need additional support, you can:

- Visit our website for instant information, available 24 hours a day, 7 days a week, at:

www.pitneybowes.com

Follow the prompts to get the FAQs or to enter an incident report for your product.

- Call Service Support at 1-800-522-0020.

When calling for support, you will need the following information. You can get the serial number (on the back of the folder) and your customer account number on your contract.

PCN/Model: FD10 Serial Number: _____

Customer Account Number: _____

Supplies: 1-800-243-7824

- Multipurpose Cleaning Kit (Part # 902-0)
- Paper Stop (PN#18MR0620013)
- DeJamming Handle (PN#18MR0620014)



Engineering the flow of communication

1 Elmcroft Road
Stamford, Connecticut 06926-0700
www.pitneybowes.com

PB Form SV40207 Rev. A 5/03
©2003 Pitney Bowes Inc.
All Rights Reserved
Printed in USA



Printed on recycled paper



* S V 4 0 2 0 7 R E V A *